
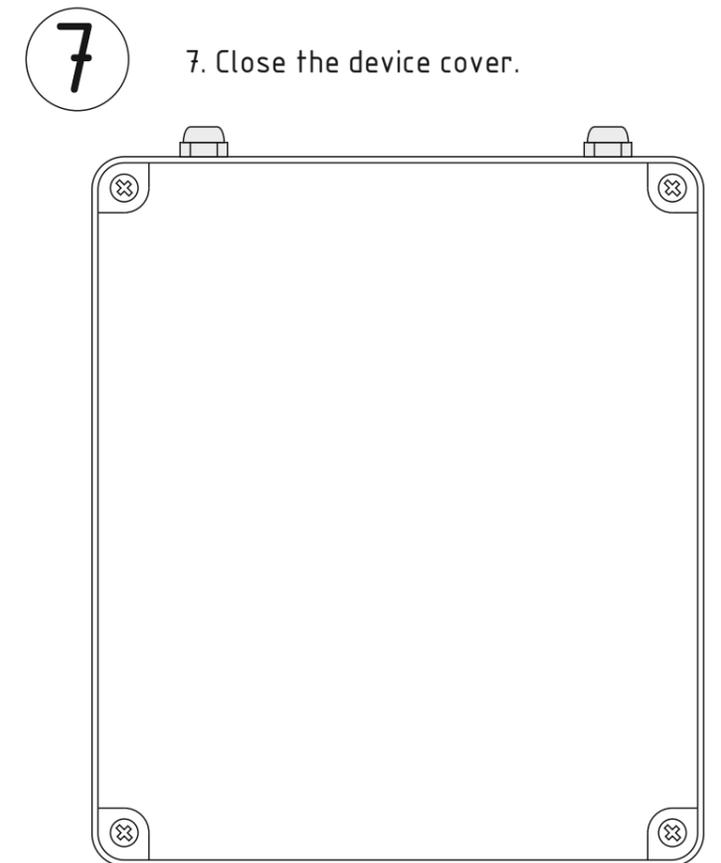
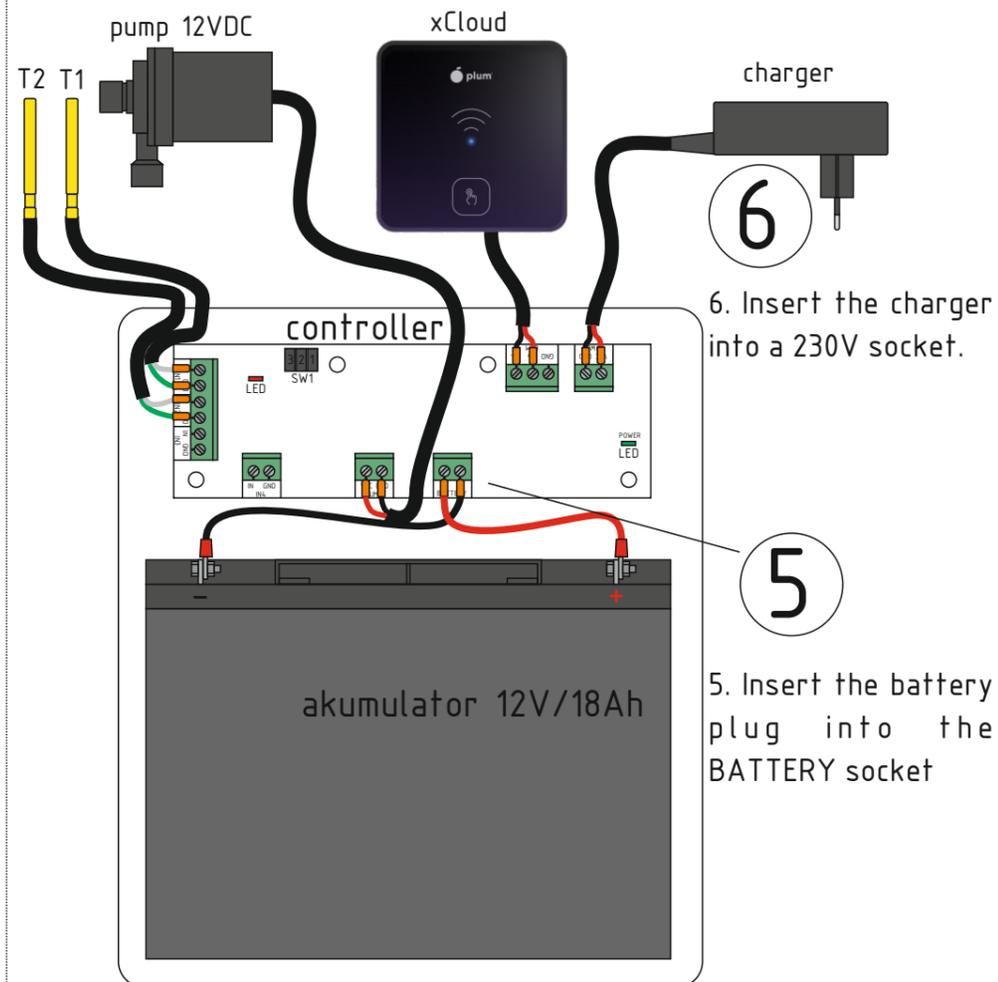
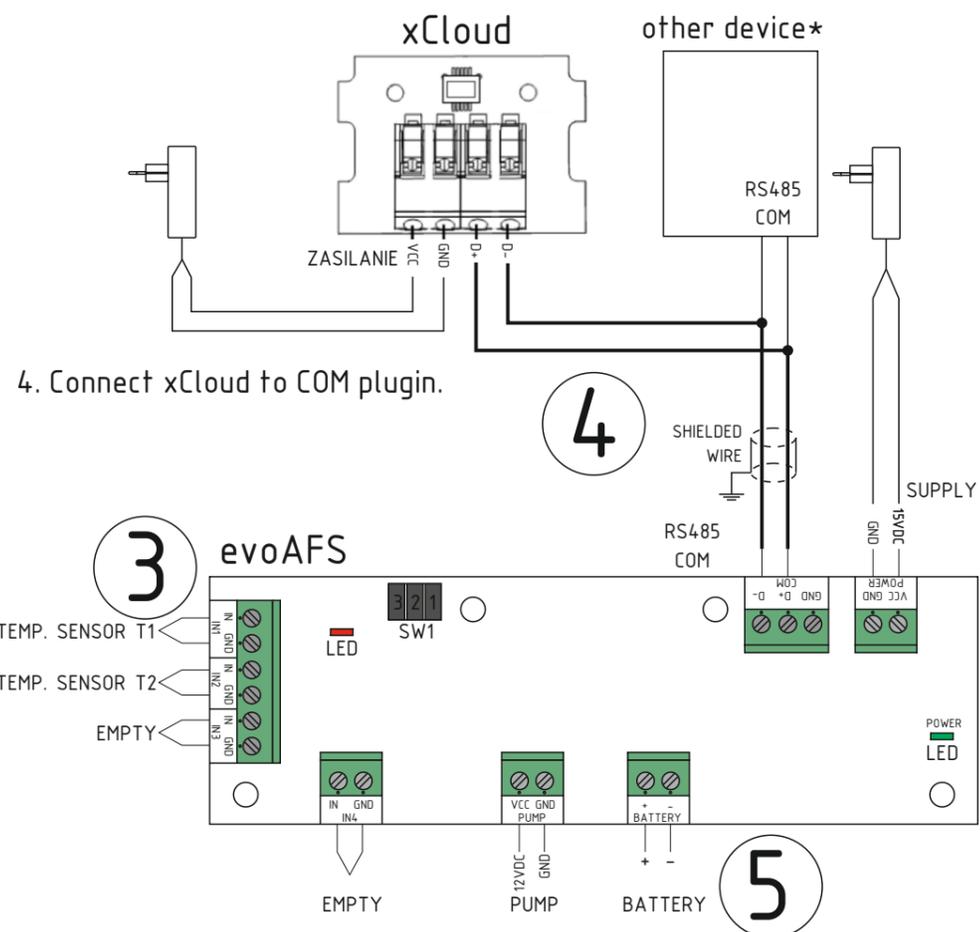
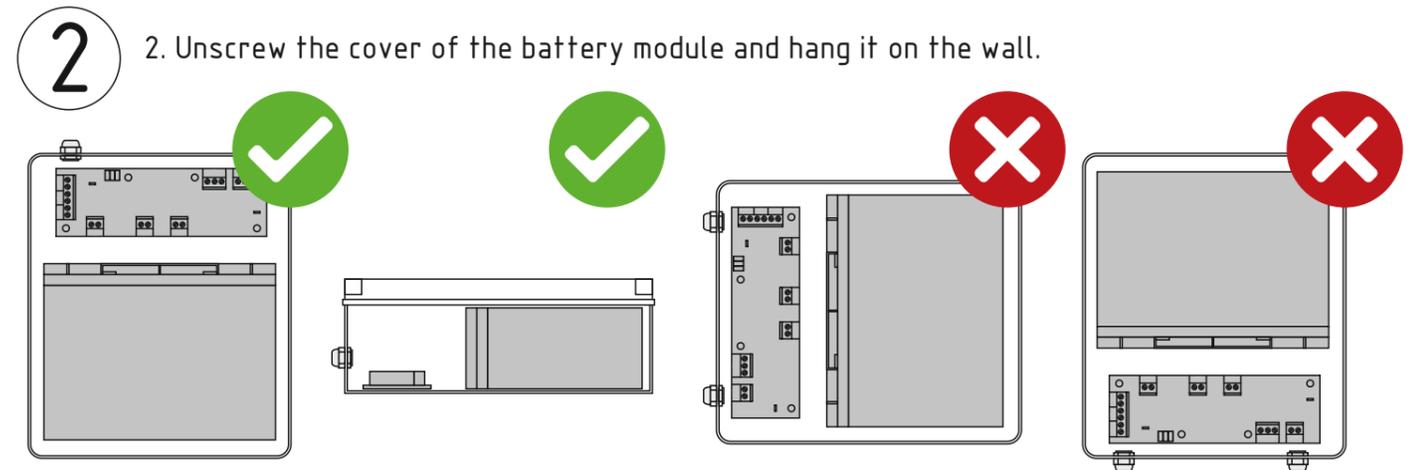


3. Attach sensor T1 outside (outside air temperature) and sensor T2 on the heat pump outlet pipe. Pay attention to the position of the wires on the plug (T1:IN1 and T2:IN2). For extension, use a 2x0,75mm², max. 15m.

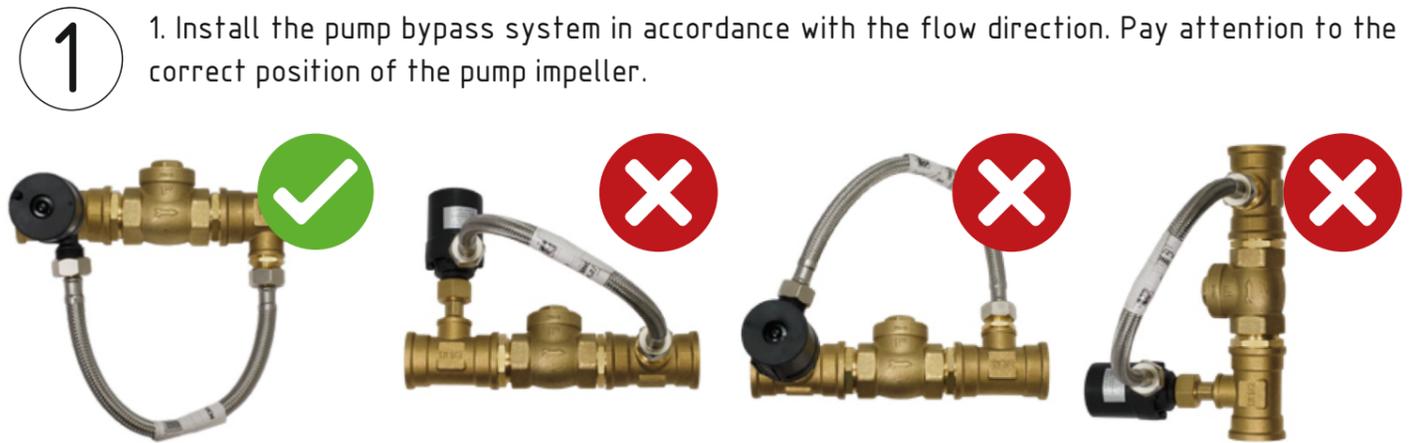

* xCloud compatible devices only. For connection and configuration details, refer to your device's manual.